

RT-200

Universal Cable + TV Remote Control



Programming and Operating Instructions

(Part # 9-544-907)

RT-200

Universal Cable + TV Remote Control

1. Introduction

Your remote control is simple to program, easy to use, and can operate two (2) devices, which include:

- CABLE** Cable set-top terminals
- TV** Televisions

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

Follow the instructions in Section 3 & 4 below to program your Cable & TV devices.

2. Installing / Replacing Batteries

Install two (2) new "AAA" batteries as indicated by the diagram in the battery compartment.

When the CBL or TV power buttons become dim or no longer illuminate during use, install two (2) new "AAA" size batteries.

Your remote control has Memory Guard[®], which eliminates reprogramming after battery changes provided new batteries are installed within 12 hours after removal of old batteries.

3. Programming Your Cable Set-Top Terminal

Your remote control supports the newest set-top terminals from your Cable TV provider, but may come pre-programmed to a specific brand.

To program your remote to operate your Cable set-top terminal, look up the brand and model in the Cable Setup Code list. If you are not sure of your brand and model, contact your Cable TV provider.

Programming your CABLE Set-top Terminal

- Press [OK] or [SEL / OK], then [MUTE] buttons together until the [TV] and [CBL] buttons illuminate.
- From the Cable Setup Code list, locate and enter the 4-digit code for your brand and model.

RT-200

Universal Cable + TV Remote Control

- Press [OK] or [SEL / OK] to lock in code. The [TV] and [CBL] buttons will blink and go out. Write your CABLE setup code _____

◆ Cable Setup Codes

Brand	Model	Code
Motorola	DCX	0002
	DCT	0002
	UDTA	0002
Cisco	8xxx series	0413
Pace	DVR	0002
Evolution		0005

4. Programming Your TV

If you have a TV that's operated by remote control, it is recommended that you plug it directly into a wall outlet instead of the Cable set-top terminal.

Programming Your TV by Code Entry Method

- Turn on the TV you want your remote to operate.
- Press [OK] or [SEL / OK], then [MUTE] buttons together until the [TV] and [CBL] buttons illuminate.
- a. Locate the 1ST 4-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control.
Entry of the correct TV code will cause your TV to turn off.
If multiple codes are listed for your brand, you may have to enter several codes until your TV turns off.
- b. As soon as you enter a 4-digit code that turns your TV off, press [MUTE].
- If your TV turns back on, press [OK] or [SEL / OK] to lock in the code. The [TV] and [CBL] buttons will blink and go out.

RT-200

Universal Cable + TV Remote Control

- If your TV does not turn back on, enter a different 4-digit code until your TV turns back on. Then press [OK] or [SEL / OK] to lock in the code. The [TV] and [CBL] buttons will blink and go out.

Programming Your TV by Point and Press[®] Method

- Turn on the TV you want your remote to operate.
- Press [OK] or [SEL / OK], then [MUTE] buttons together until the [TV] and [CBL] buttons illuminate.
- Press and hold the [CH +] button until your TV turns off. While you are pressing the [CH +] button, the [TV] and [CBL] buttons will blink. As soon as your TV turns off, release [CH +].
- Press [MUTE]. If your TV...
 - Turns back on, press [OK] or [SEL / OK] to lock in the code. The [TV] and [CBL] buttons will blink and go out.
 - Does not turn back on, press [CH -] one step at a time until your TV turns back on. Each time you press the [CH -] button, the [TV] and [CBL] buttons will blink.
Once you have found a code that turns your TV on / off, press [OK] or [SEL / OK] to lock in the code. The [TV] and [CBL] buttons will blink and go out.

5. Volume Control

When you first program your remote, volume and mute are controlled through your TV, so whenever you press the VOL +/- or MUTE buttons, the TV button will illuminate.

To control volume / mute through your Cable set-top terminal, follow these steps :

- Press [CBL], then [OK] or [SEL / OK] buttons together until the [CBL] button illuminates.
- Press [VOL +], then [CBL] for cable set-top volume. The [CBL] button will blink and go out.
Note : Under this setting, the [CBL] button will

RT-200

Universal Cable + TV Remote Control

illuminate whenever the VOL +/- and MUTE buttons are pressed.

To program volume control back to your TV, follow these steps :

- Press [CBL], then [OK] or [SEL / OK] buttons together until the [CBL] button illuminates.
- Press [VOL +], then [TV] for TV volume. The [TV] button will blink and go out.

6. All Power

To program the [CBL] button to turn your Cable set-top terminal and TV on / off with one button press, follow these steps :

- Press [CBL], then [MENU] buttons together until the [CBL] button blinks two times.
The [CBL] button will now send the cable set-top power signal immediately followed by the TV power signal.

To reset the [CBL] button to turn on / off only your Cable set-top terminal, repeat steps 1 - 2 above.

7. Input

The [INPUT] button changes the input source of your electronic devices. In the remote's default setting, this button changes the input source (Input 1, Input 2....) on your TV.

To program [INPUT] to operate the input function on your Cable set-top terminal, follow these steps :

- Press [INPUT], then [OK] or [SEL / OK] buttons together until the [CBL] button illuminates.
- Press [CBL]. The [CBL] button will blink and go out.

To program [INPUT] to operate the input function on your TV, follow these steps :

- Press [INPUT], then [OK] or [SEL / OK] buttons together until the [CBL] button illuminates.
- Press [TV]. The [TV] button will blink and go out.

RT-200

Universal Cable + TV Remote Control

8. Code Number Readback

To identify the 4-digit TV setup code stored under the Point and Press[®] method....

- Press [TV], then [OK] or [SEL / OK] buttons together until the [TV] button illuminates.
- Press [INFO] to identify your TV setup code. The [TV] button will "blink back" the code numbers, with a 1-second interval between each digit of the code.

Example : For code "0035", the [TV] button will blink 6 times rapidly, 6 times rapidly, then 3 times slowly, then 5 times slowly.

9. Resetting Your Remote Control

To reset your remote control to its default settings, follow these steps :

- Press [CBL], then [OK] or [SEL / OK] buttons together until the [CBL] button illuminates.
- Press [1]. The [CBL] button will blink and go out.

10. Helpful Tips and Troubleshooting

- Your remote is equipped with a Point and Press[®] Programming label on the back of its case. This will help you quickly program the remote without using codes.

- The [TV] and [CBL] power buttons will illuminate while the remote is in a programming mode. In the absence of an entry, these buttons will go out after 30-seconds.

When locking in your devices, the [TV] and [CBL] power buttons will blink and go out.

- When using the Point and Press[®] programming method, you may find a code that turns your TV off but not back on. If this happens....

- The correct code has not been found. Continue pressing [CH +] until your TV turns on and off.

OR

- You may have gone past the correct

RT-200

Universal Cable + TV Remote Control

matching code. Try pressing [CH -] one step at a time until you find a code that turns your TV on.

- Time Out - If the same button is pressed and held for 30-seconds, your remote control will turn itself off automatically. This extends battery life should the remote become lodged under or between heavy objects, for example sofa cushions.

- If you have any questions concerning the operation of your Cable set-top terminal, contact your Cable operator.

Rev. 08/11

© 2011, Contec, LLC

Point and Press[®] Memory Guard[®] are registered trademarks of Contec, LLC

◆ TV Setup Codes

BRAND	CODE
Abex	0016
Acer	0454 0782
Admiral	0026 0027 0028 0029 0054 0211 0213 0408
Advent	0047 0072 0094 0425 0447 0463
Adventura	0047
Aiko	0015 0051 0391
Aiwa	0214 0471
Akai	0020 0031 0053 0462 0473 0522 0524 0547 0572 0586
Alleron	0211 0395
Amark	0023 0215
Ambassador	0159
America Action	0168
Amstrad	0157
Amtron	0168 0400
Anam	0044 0168 0217 0218 0219

RT-200

Universal Cable + TV Remote Control

	0220	0221	0222	0223	0400
	0403				
Anam International	0403				
AOC	0053	0073	0108	0384	0455
	0573	0587			
Apex	0030	0038	0427	0462	0599
Apex Digital	0866				
Astar	0462				
Audiovox	0168	0191	0220	0400	0465
	0659				
Auria	0072				
Baysonic	0168				
Belcor	0073				
Bell & Howell	0211	0213	0355	0388	0736
Ben Q	0454	0820			
Bradford	0168	0400			
Brilliant	0792				
Broksonic	0165	0167	0169	0423	0434
	0809				
Brokwood	0073				
Candle	0068	0073	0091	0108	0385
	0573	0587			
Carver	0072	0405	0729		
Celebrity	0020				
Centurian	0095	0107	0108		
Changhong	0030				
Cineral	0391	0408			
Citizen	0015	0023	0051	0068	0073
	0091	0108	0168	0211	0213
	0233	0355	0385	0388	0391
	0400	0573	0587	0741	
Coby	0073	0095	0459	0462	0558
	0873				
Colortyme	0730				
Clairtone	0051				
Concerto	0073	0095	0108	0573	0587
Contec/Cony	0039	0147	0168	0233	0400
	0732				
Coronado	0023				
Craig	0168	0217	0218	0220	0223
	0400	0577	0786	0874	
Crosley	0072	0405	0598	0729	
Crown	0023				
Curtis Mathes	0016	0023	0031	0054	0070
	0072	0073	0107	0108	0211
	0213	0355	0388	0405	0462
	0573	0587	0606	0729	0736
	0741	0759	0777		
Curtis	0462				

